

HCI_VENDOR_SET_TX_PWR

There is a vendor HCI command to set TX power. If the customer has a HCI interface, they can send the following HCI command:

Command	Opcode	Param Length	Params	Recommended Param Values		
HCI_VENDOR_SET_TX_PWR	0xFDA5u 	4 Octets	Channel ID, Power Level, ConnHandleLSB, ConnHandleMSB	param	size	Value example
			Channel ID	1 octet	0x00	
			Power Level	1 octet	-20, -16, -12, -6, 0, 4 (use 2's complement for negative numbers)	
			connhandle	2 octet	0x0000	