


SNR Measurement

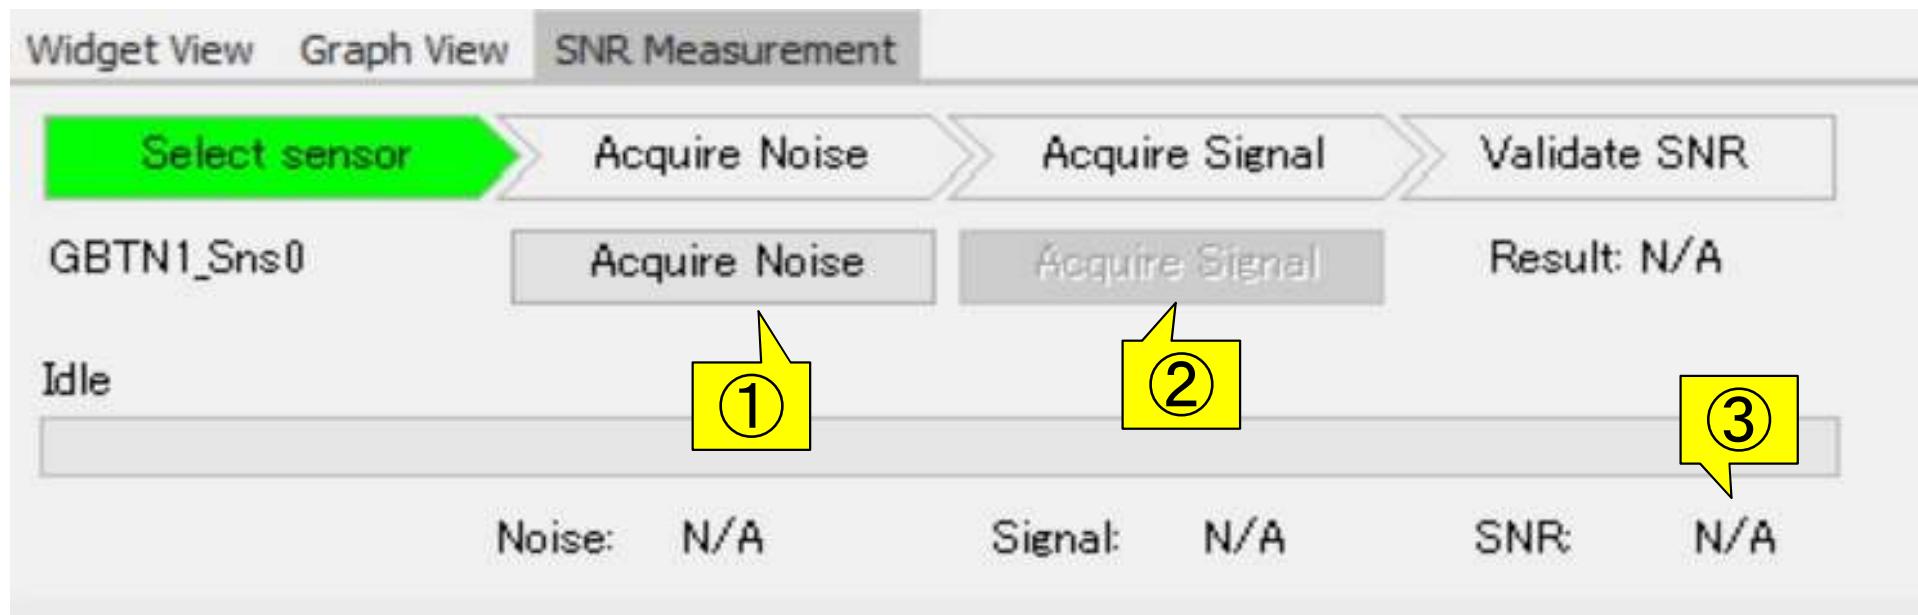

Action	Use API (Reference: CapSense_P4_v5_0.pdf / CapSense Low-Level APIs)
① Acquire Noise	cystatus CapSense_UpdateWidgetBaseline(uint32 widgetId) or void CapSense_InitializeWidgetBaseline(uint32 widgetId)
② Acquire Signal	uint32 CapSense_GetSensorCapacitance(uint32 widgetId, uint32 sensorId)
③ SNR Measurement	?