

## Objective

This example demonstrates capability of PSoC 4 BLE to communicate with an I2C digital sensor and a BLE Central device.


## Overview

This example uses the BLE Pioneer Kit to communicate with a BMP180 Pressure Sensor and a BLE Central device. The data communicated over BLE is the Temperature, Barometric Pressure and Altitude values acquired from the sensor. This project uses an I2C component to acquire the data from the sensor and a BLE component to report it to the Central device. The sensor data is sent to the Central device as Notifications using a Custom Service. Additionally the sensor data can also be monitored graphically in real time using Micrium® µC/Probe™ application.

The BLE profile in this example consists of a BLE custom service, named **BMP180**. The **BMP180** service consists of three custom characteristics, namely **Temperature**, **Pressure** and **Altitude**. These characteristics are used for sending 4-byte sensor data as notification to the connected GATT client device whenever new data is available.

For detailed information on the BMP180 Pressure Sensor and its operation, please refer to the [BMP180 datasheet](#).

Figure 1: PSoC 4 BLE Pressure Sensor Application

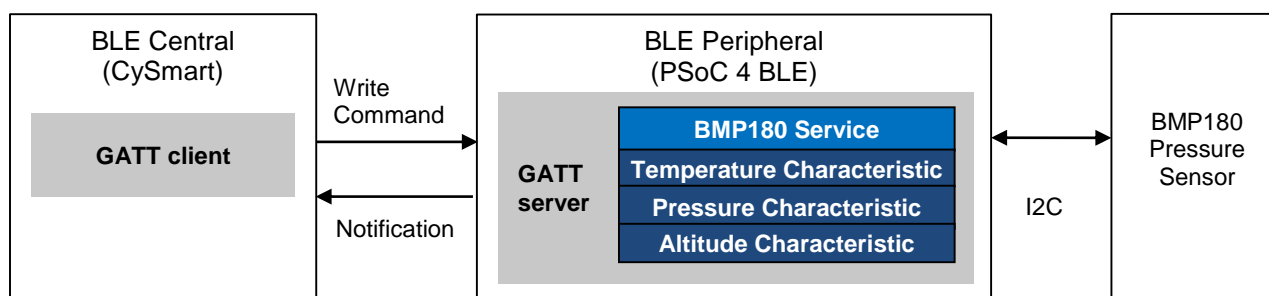

## Requirements

**Design Tool:** PSoC Creator 3.1 CP1, CySmart 1.0 and µC/Probe 3.5.15 (optional)

**Programming Language:** C (GCC 4.8.4 – included with PSoC Creator)

**Associated Devices:** All PSoC 4 BLE devices

**Required Hardware:** CY8CKIT-042-BLE Bluetooth® Low Energy (BLE) Pioneer Kit and BMP180 Pressure Sensor

## Hardware Setup

The BLE Pioneer Kit has all of the necessary hardware required for this lab, except for BMP180 Pressure Sensor which is not included in the kit and can be purchased from Adafruit®.

In this setup, the sensor is connected to outer row of the J2 Arduino™ compatible header on the BLE Pioneer Kit. The sensor communicates and sources the power using the PSoC 4 BLE pins available in the J2 header. The User Button which is used for waking up the PSoC 4 BLE device/to start the advertisement and the red LED which indicates advertising state are hardwired on the BLE Pioneer Kit.

The diagram illustrates the architecture of the BLE Pioneer Kit. It is divided into two main sections: the kit's internal components and its external connections.

**Internal Components (PSoc 4 BLE):**


- ARM Cortex-M0:** The central processing unit.
- I2C:** The interface used to communicate with the BMP180 sensor.
- Bluetooth Low Energy Subsystem (BLESS):** The dedicated BLE hardware component.

**External Connections:**

- BMP180 Pressure Sensor:** Connected to the I2C interface of the ARM Cortex-M0.
- BLE Connection:** Established between the BLESS and an external **BLE-USB Bridge**.
- CySmart BLE Test and Debug Tool:** Connected to the BLE-USB Bridge for testing and debugging.


## PSoC Creator Schematic

Figure 4: PSoC Creator Schematic

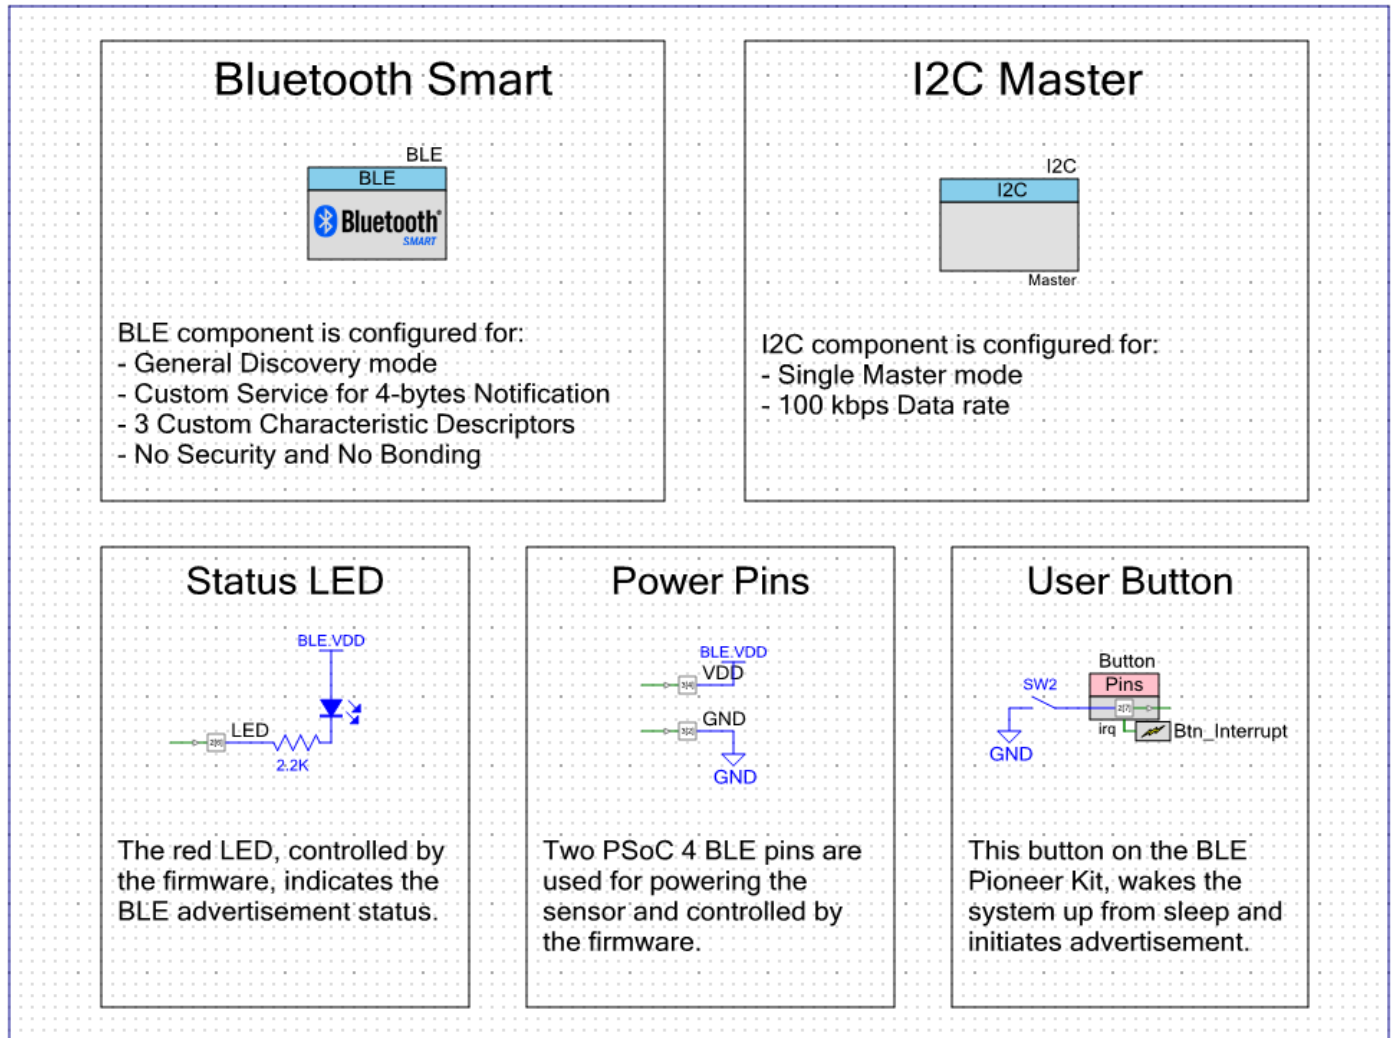

## Firmware Flow

Figure 5: Firmware Flow

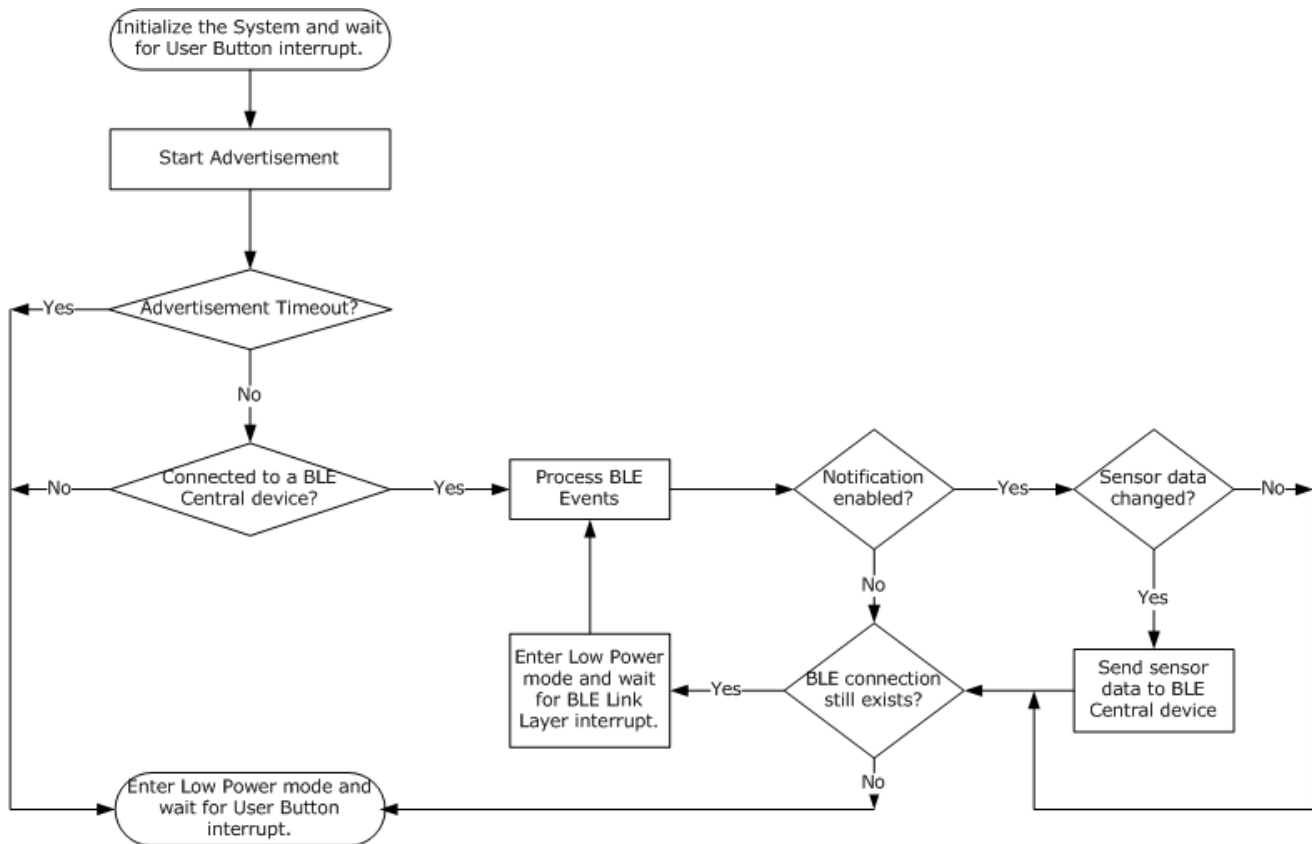

This example project contains the following source files:

- main.c:** This file contains the main function, which is the entry point and execution of the firmware application. It also contains function definitions for initializing the system and interrupts, reading the sensor data, processing the notification, handling the low power mode operation and handling the status LED.  
 The low power mode function is continuously called in the main loop and is responsible for pushing the BLE subsystem (BLESS) as well as the CPU to Deep Sleep mode as much as possible. The wakeup source is either the BLE subsystem Link Layer internal timer or the interrupt from the User Button press. This allows for low power mode implementation.
- BLEApplication.c:** This file contains function definitions related to BLE communication and operation. It contains the event callback function definition that is registered with the BLE component startup and used by the component to send various BLE events from the BLE stack to the application layer for processing. It contains functions to send the notifications to the GATT client device and for updating the BLE Connection Parameters, which is important for low power mode operation.
- I2CMaster.c:** This file contains function definitions related to BLE communication and sensor operation. It contains functions for reading the calibration data, uncompensated temperature and pressure values from the sensor. It contains algorithm to calculate the true temperature, barometric pressure and the altitude value.


## Build and Program

This section shows how to build the project and program the PSoC 4 BLE device. If you are using a development kit with a built-in programmer (BLE Pioneer Kit, for example), connect the BLE Pioneer Baseboard to your computer using the USB Standard-A to Mini-B cable. For other kits, refer to the kit user guide.

If you are developing on your own hardware, you need a hardware debugger, for example, a Cypress [CY8CKIT-002 MiniProg3](#).


1. On PSoC Creator, select **Build > Clean and Build PSoC\_4\_BLE\_Pressure\_Sensor**, as shown in [Figure 6](#).

Figure 6: Build Project

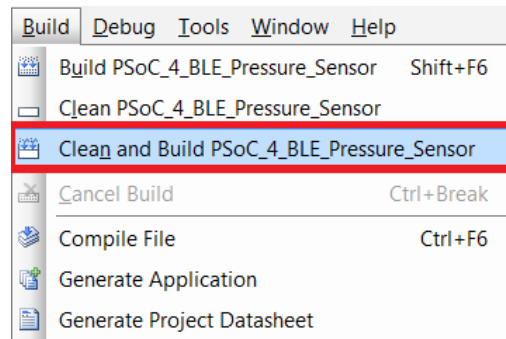


2. On a successful build, the total Flash and SRAM usage is reported as shown in [Figure 7](#).

Figure 7: Build Succeeded

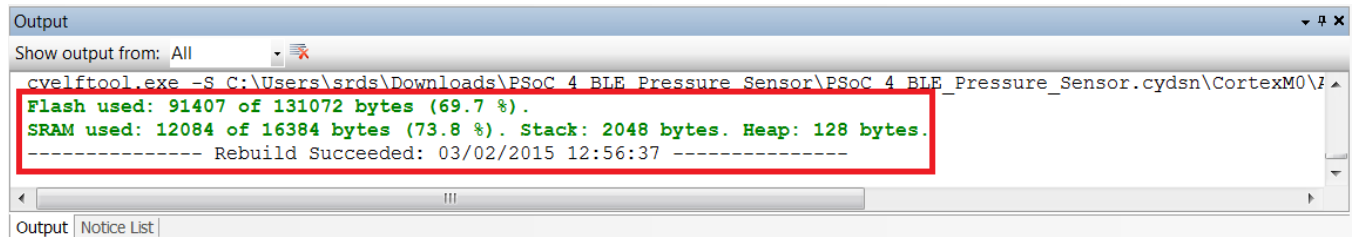


3. Select **Debug > Select Debug Target**, as shown in [Figure 8](#).

Figure 8: Selecting Debug Target

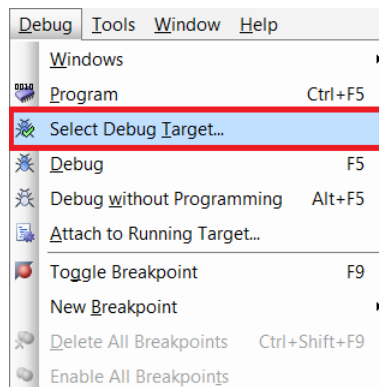

4. In the **Select Debug Target** dialog box, click **Port Acquire**, and then click **Connect** as shown in [Figure 9](#). Click **OK** to close the dialog box.


Figure 9: Connecting to a Device

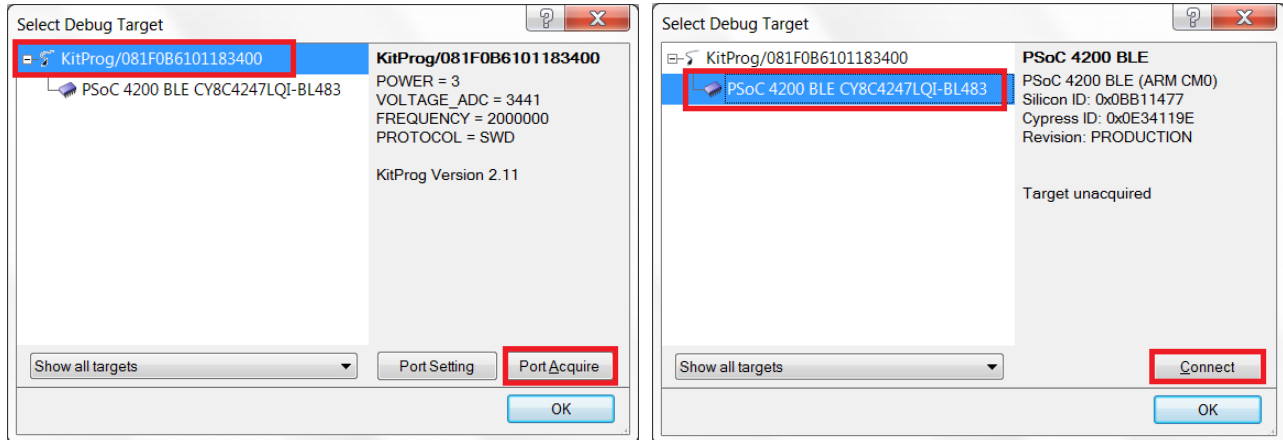

If you are using your own hardware, make sure the **Port Setting** configuration under **Select Debug Target** dialog box for your programming hardware is configured as per your setup.


5. Select **Debug > Program** to program the device with the project, as shown in [Figure 10](#).

Figure 10: Programming the Device

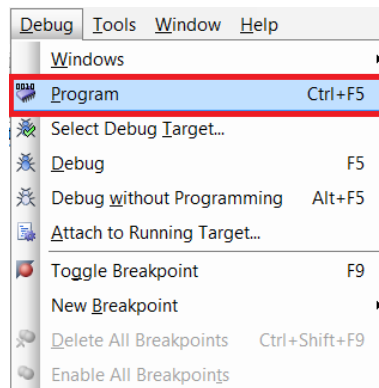

You can view the programming status on the PSoC Creator status bar (bottom-left corner of the window), as shown in [Figure 11](#).

Figure 11: Programming Status



## Testing


After programming the device successfully by following the steps in [Build and Program](#), press the User Button (**SW2**) on the BLE Pioneer Kit to start the advertisement. Advertisement is indicated by a blinking red LED on the BLE Pioneer Kit.

**Note:** This example has an advertisement timeout of 30 seconds after which it returns to the low power mode. Press **SW2** again to restart the advertisement.

### Testing with the CySmart BLE Test and Debug Utility for Windows PC:


1. Plug the BLE-USB Bridge (included with the BLE Pioneer Kit) in your computer's USB port. Make sure the sensor is connected to BLE Pioneer Baseboard as described in [Hardware Setup](#).
2. On your computer, launch **CySmart 1.0**. It is located in the **All Programs -> Cypress -> CySmart 1.0** folder in the Windows Start menu. The tool opens up and asks you to **Select BLE Dongle Target**. Select the **Cypress BLE Dongle (COMxx)** and click **Connect**, as shown in [Figure 12](#).

Figure 12: Select BLE Dongle Target

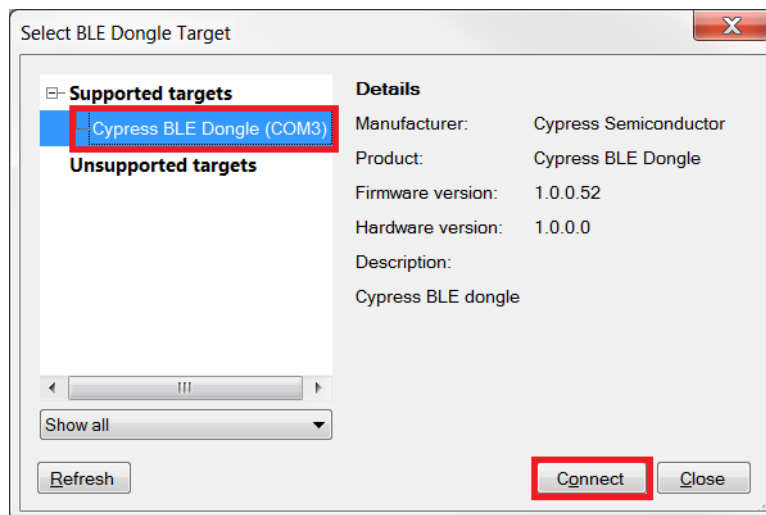

3. When the BLE-USB Bridge is connected, click on **Start Scan** to find your BLE device, as shown in [Figure 13](#).


Figure 13: Finding a BLE Device

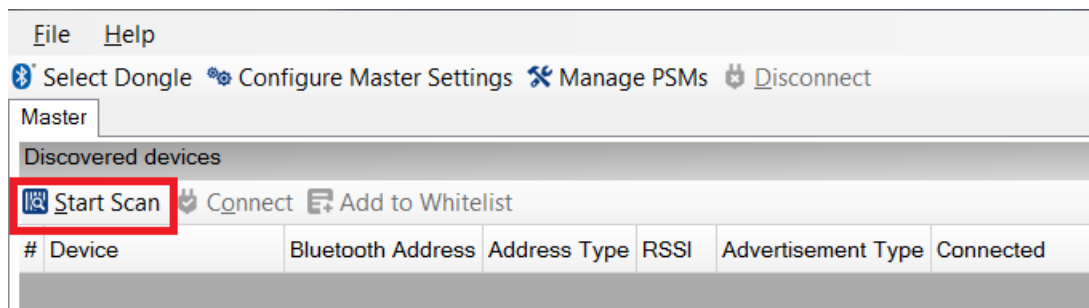

The tool lists all the nearby devices in the Discovered devices section.


4. Click on **BMP180 Pressure Sensor** and then click **Connect** to connect to the device, as shown in [Figure 14](#).

Figure 14: Connect to Peripheral

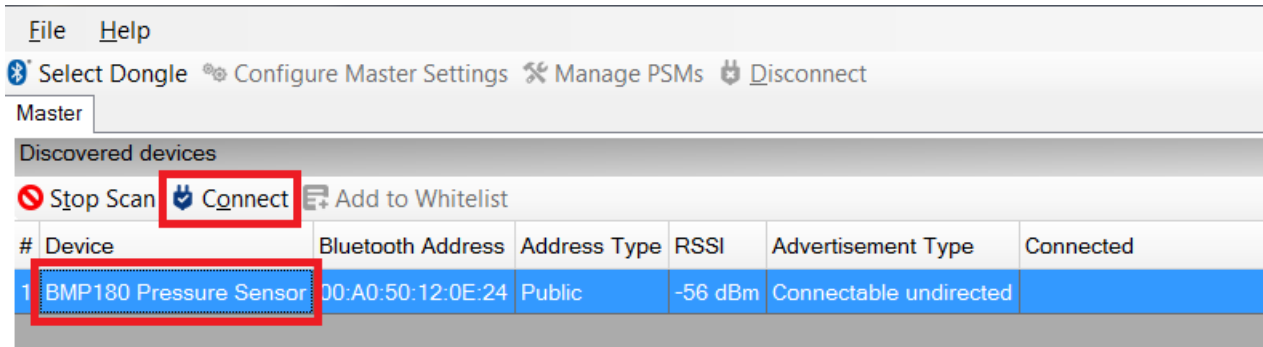


- When connected, the tool will display a message for the **Update connection parameters**. Select **Yes**, as shown in Figure 15.

Figure 15: Update Connection Parameter

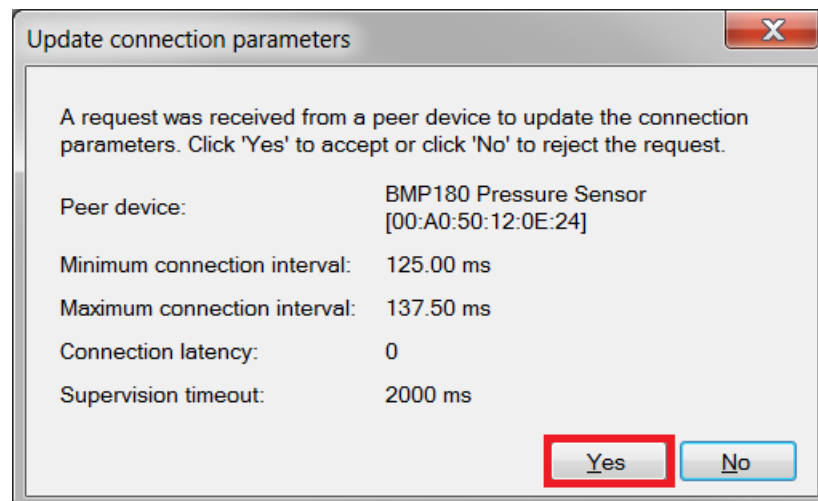

- The tool will now open a separate tab for the device. Click **Discover All Attributes** to list all the Attributes in the device, with their respective UUIDs and descriptions, as shown in Figure 16.


Figure 16: Discovering Attributes of a Connected BLE Device

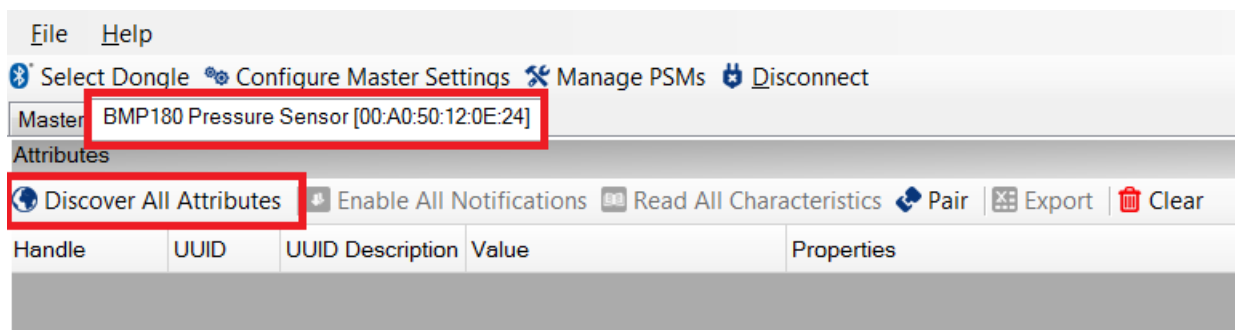



- Locate the **Client Characteristic Configuration** Attribute for the **Temperature** characteristic (Handle 0x000F). Click **Read Value** to read the existing Client Characteristic Configuration Descriptor (CCCD) value, as shown in Figure 17.

Figure 17: Read Attribute Value

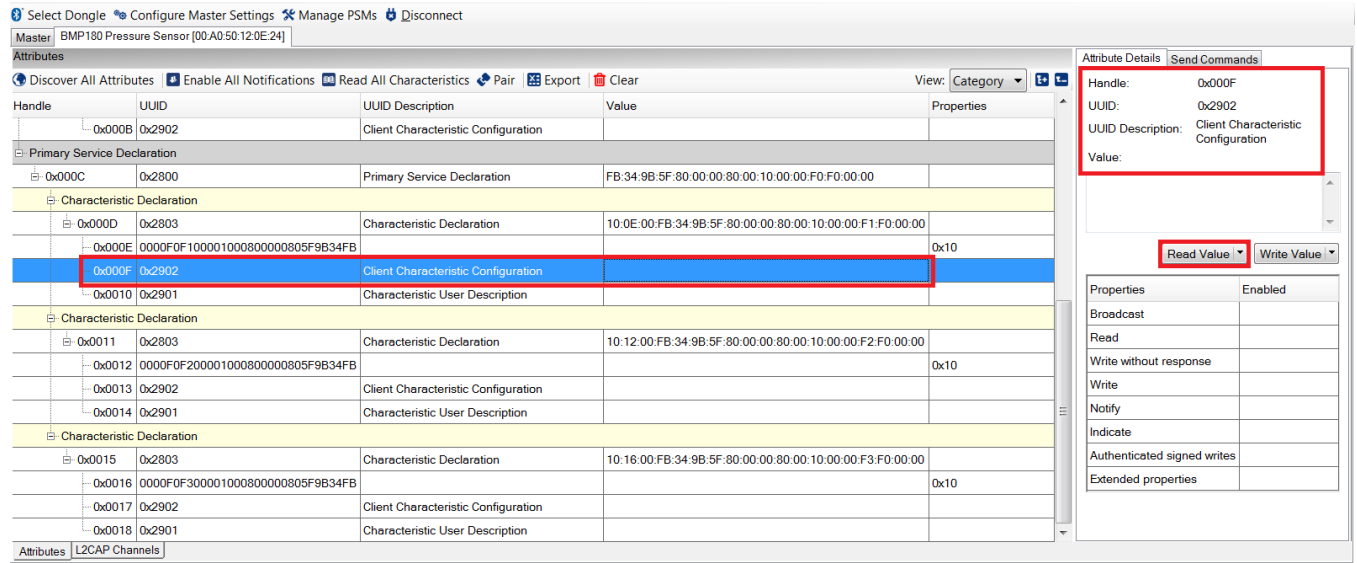


The screenshot shows the Cypress BLE tool interface. The main window displays a table of attributes for the BMP180 Pressure Sensor. The table has columns for Handle, UUID, UUID Description, Value, and Properties. The attribute with Handle 0x000F and UUID 0x2902 is highlighted in blue. The Attribute Details panel on the right shows the selected attribute's details, including the Handle, UUID, and the current Value field.

Handle	UUID	UUID Description	Value	Properties
0x000B	0x2902	Client Characteristic Configuration		
<b>Primary Service Declaration</b>				
0x000C	0x2800	Primary Service Declaration	FB:34:9B:5F:80:00:00:80:00:10:00:00:F0:F0:00:00	
<b>Characteristic Declaration</b>				
0x000D	0x2803	Characteristic Declaration	10:0E:00:FB:34:9B:5F:80:00:00:80:00:10:00:00:F1:F0:00:00	
0x000E	0000F0F100001000800000805F9B34FB			0x10
0x000F	0x2902	Client Characteristic Configuration		
0x0010	0x2901	Characteristic User Description		
<b>Characteristic Declaration</b>				
0x0011	0x2803	Characteristic Declaration	10:12:00:FB:34:9B:5F:80:00:00:80:00:10:00:00:F2:F0:00:00	
0x0012	0000F0F200001000800000805F9B34FB			0x10
0x0013	0x2902	Client Characteristic Configuration		
0x0014	0x2901	Characteristic User Description		
<b>Characteristic Declaration</b>				
0x0015	0x2803	Characteristic Declaration	10:16:00:FB:34:9B:5F:80:00:00:80:00:10:00:00:F3:F0:00:00	
0x0016	0000F0F300001000800000805F9B34FB			0x10
0x0017	0x2902	Client Characteristic Configuration		
0x0018	0x2901	Characteristic User Description		

The Attribute Details panel on the right shows the selected attribute's details, including the Handle, UUID, and the current Value field.

- Change the **Value** to **01:00** under **Attribute Details** tab and click **Write Value**, as shown in Figure 18. This enables the notifications for the **Temperature** characteristic.

Figure 18: Write Attribute Value

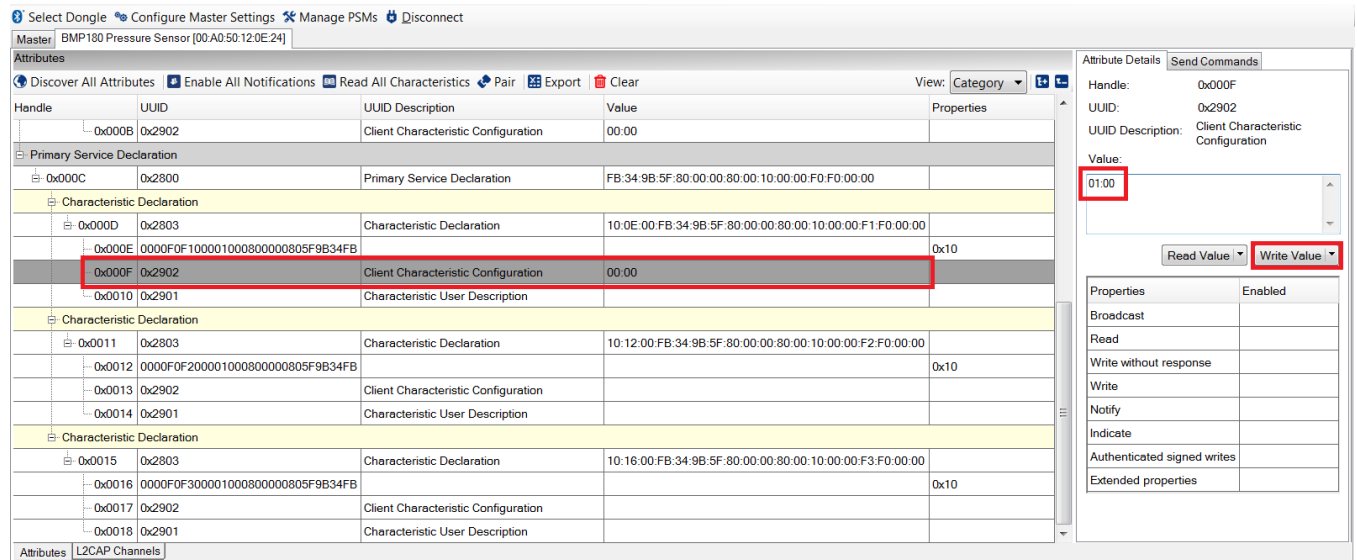

The screenshot shows the Cypress BLE tool interface. The main window displays a table of attributes for the BMP180 Pressure Sensor. The table has columns for Handle, UUID, UUID Description, Value, and Properties. The attribute with Handle 0x000F and UUID 0x2902 is highlighted in blue. The Attribute Details panel on the right shows the selected attribute's details, including the Handle, UUID, and the current Value field, which is now set to 01:00.

Handle	UUID	UUID Description	Value	Properties
0x000B	0x2902	Client Characteristic Configuration	00:00	
<b>Primary Service Declaration</b>				
0x000C	0x2800	Primary Service Declaration	FB:34:9B:5F:80:00:00:80:00:10:00:00:F0:F0:00:00	
<b>Characteristic Declaration</b>				
0x000D	0x2803	Characteristic Declaration	10:0E:00:FB:34:9B:5F:80:00:00:80:00:10:00:00:F1:F0:00:00	
0x000E	0000F0F100001000800000805F9B34FB			0x10
0x000F	0x2902	Client Characteristic Configuration	00:00	
0x0010	0x2901	Characteristic User Description		
<b>Characteristic Declaration</b>				
0x0011	0x2803	Characteristic Declaration	10:12:00:FB:34:9B:5F:80:00:00:80:00:10:00:00:F2:F0:00:00	
0x0012	0000F0F200001000800000805F9B34FB			0x10
0x0013	0x2902	Client Characteristic Configuration		
0x0014	0x2901	Characteristic User Description		
<b>Characteristic Declaration</b>				
0x0015	0x2803	Characteristic Declaration	10:16:00:FB:34:9B:5F:80:00:00:80:00:10:00:00:F3:F0:00:00	
0x0016	0000F0F300001000800000805F9B34FB			0x10
0x0017	0x2902	Client Characteristic Configuration		
0x0018	0x2901	Characteristic User Description		

The Attribute Details panel on the right shows the selected attribute's details, including the Handle, UUID, and the current Value field, which is now set to 01:00.


- When the **Temperature** characteristic is enabled, the BLE Central device starts receiving the temperature data acquired from the sensor. The received data is in steps of 0.1°C and is displayed in the Value field for Handle 0x000E, as shown in Figure 19.

Figure 19: Notification Received

Primary Service Declaration				
0x000C	0x2800	Primary Service Declaration	FB:34:9B:5F:80:00:00:80:00:10:00:00:F0:F0:00:00	
Characteristic Declaration				
0x000D	0x2803	Characteristic Declaration	10:0E:00:FB:34:9B:5F:80:00:00:80:00:10:00:00:F1:F0:00:00	
0x000E	0000F0F100001000800000805F9B34FB		0B:01:00:00	0x10
0x000F	0x2902	Client Characteristic Configuration	01:00	
0x0010	0x2901	Characteristic User Description		

10. Locate the **Client Characteristic Configuration** Attribute for the **Pressure** characteristic (Handle 0x0013) and change the **Value** to **01:00** under **Attribute Details** tab and click **Write Value**, to enable the notifications for the **Pressure** characteristic.
  11. When the **Pressure** characteristic is enabled, the BLE Central device starts receiving the barometric pressure data acquired from the sensor. The received data is in steps of 0.01hPa and is displayed in the Value field for Handle 0x0012.
  12. Locate the **Client Characteristic Configuration** Attribute for the **Altitude** characteristic (Handle 0x0017) and change the **Value** to **01:00** under **Attribute Details** tab and click **Write Value**, to enable the notifications for the **Altitude** characteristic.
  13. When the **Altitude** characteristic is enabled, the BLE Central device starts receiving the altitude data acquired from the sensor. The received data is in steps of 1m and is displayed in the Value field for Handle 0x0016.
- Alternatively all service notifications can be enabled by clicking on **Enable All Notifications**, as shown in Figure 20.


Figure 20: Enable All Notifications

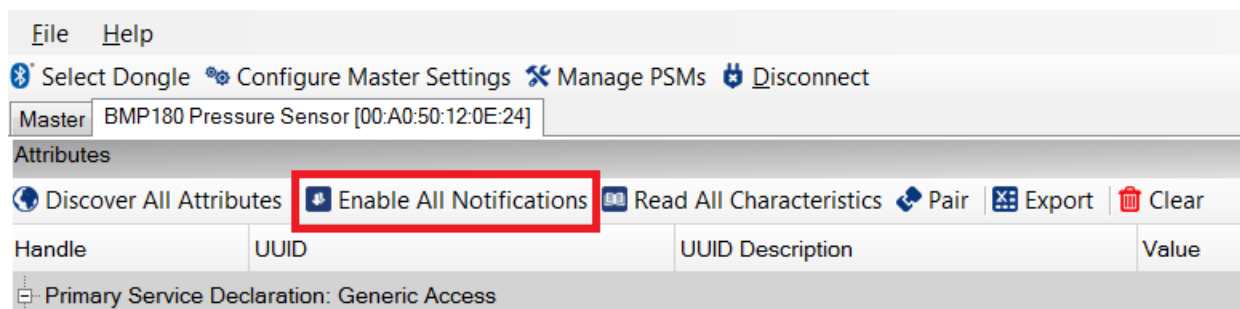

### Testing with the µC/Probe application:

Once you are connected to a BLE Central device and enabled notifications as described in **Testing with the CySmart BLE Test and Debug Utility for Windows PC** section,


1. On your computer, launch **Micrium uC-Probe**. It is located in the **All Programs -> Micrium -> uC-Probe** folder in the Windows Start menu.
2. Click the **Settings** button from the toolbar and select the **Communication** tab in the µC/Probe Settings window.
3. Click on **Cypress PSoC Prog** under Debug Interface and select the **KitProg/<Serial\_Number>** from the drop-down, as shown in Figure 21. Click **OK** to close the window.

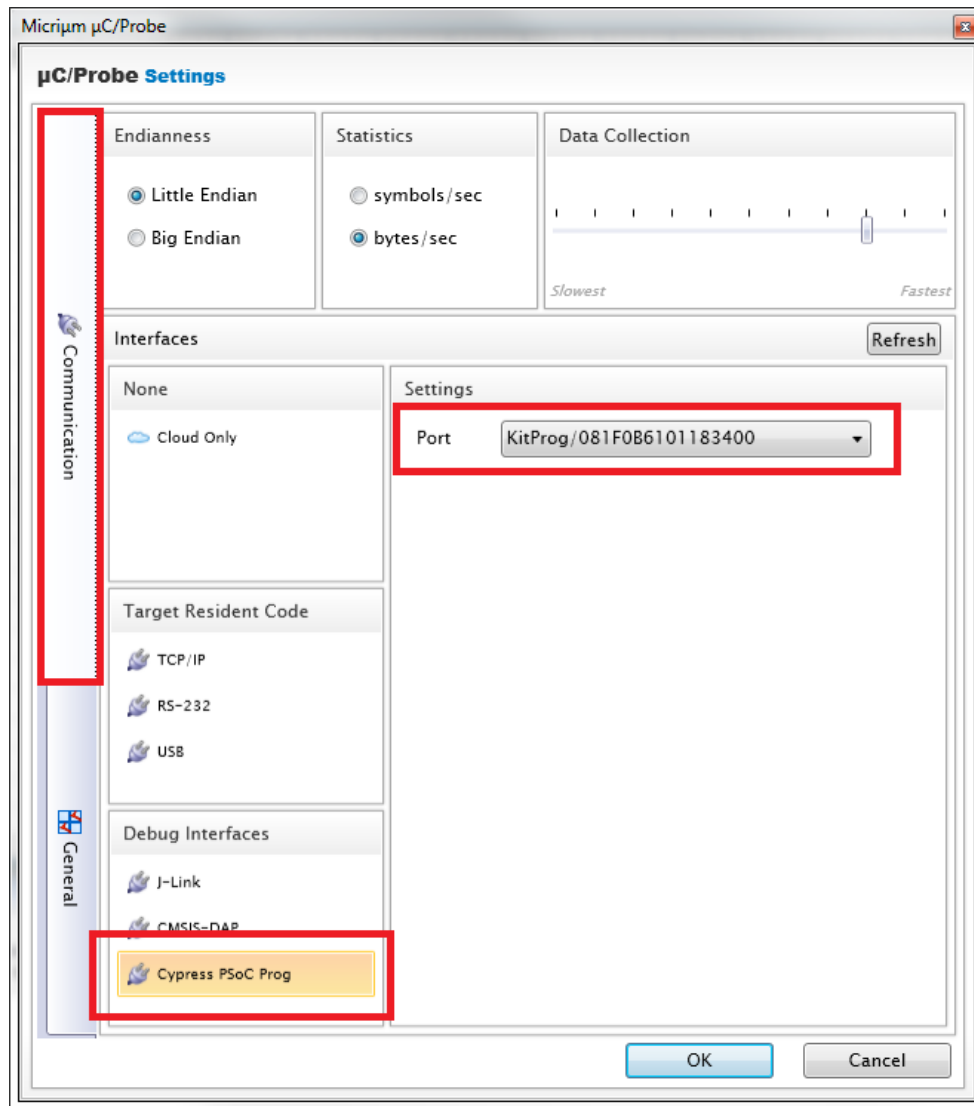Figure 21:  $\mu$ C/Probe Settings


4. Select **File > Open** menu, load the *PSoC\_4\_BLE\_Pressure\_Sensor.wsp* file included in the example project directory and click **Open** as shown in Figure.
5. Click the **Run** button from the toolbar, as shown in Figure 22.

Figure 22: Run Button in  $\mu$ C/Probe


Note that if you are using the Educational Edition of the  $\mu$ C/Probe, a dialog appears reminding you to purchase the Professional Edition. Click **Close** on the dialog to continue, as shown in Figure 23.

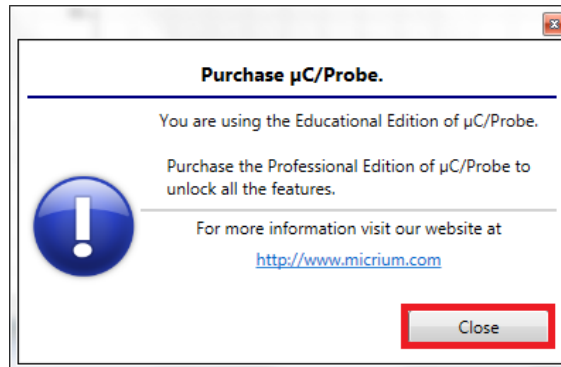Figure 23: Purchase  $\mu$ C/Probe


- The  $\mu$ C/Probe application shows all the graphical elements configured in the workspace and each graphical element shows the corresponding data acquired from the sensor, as shown in Figure 24.

Figure 24:  $\mu$ C/Probe GUI Elements


## Related Documents

Table 1 lists all relevant application notes, code examples, knowledge base articles, device datasheets, and Component / user module datasheets.

Table 1: Related Documents

Document	Title	Comment
<a href="#">AN91267</a>	Getting Started with PSoC 4 BLE	Provides an introduction to PSoC 4 BLE device that integrates a Bluetooth Low Energy radio system along with programmable analog and digital resources.
<a href="#">AN91445</a>	Antenna Design Guide	Provides guidelines on how to design an antenna for BLE applications.